 
 



eNX CL J1900 IGN

Puerto serie: COM3/COM4 admite dos modos de transmisión de RS232/RS485

- Necesita cambiar los jumper LE1, LE2, LE3 y configurar la BIOS

管脚	RS232	RS485	
1	DCD	TX-	
2	RXD	TX+	
3	TXD		
4	DTR		
5	GND	GND	
6	DSR		
7	RTS		
8	CTS		
9	RI		

	LE1/LE2/LE3		
COM3	1-3	RS232	
	3-5	RS485	
COM4	2-4	RS232	
	4-6	RS485	

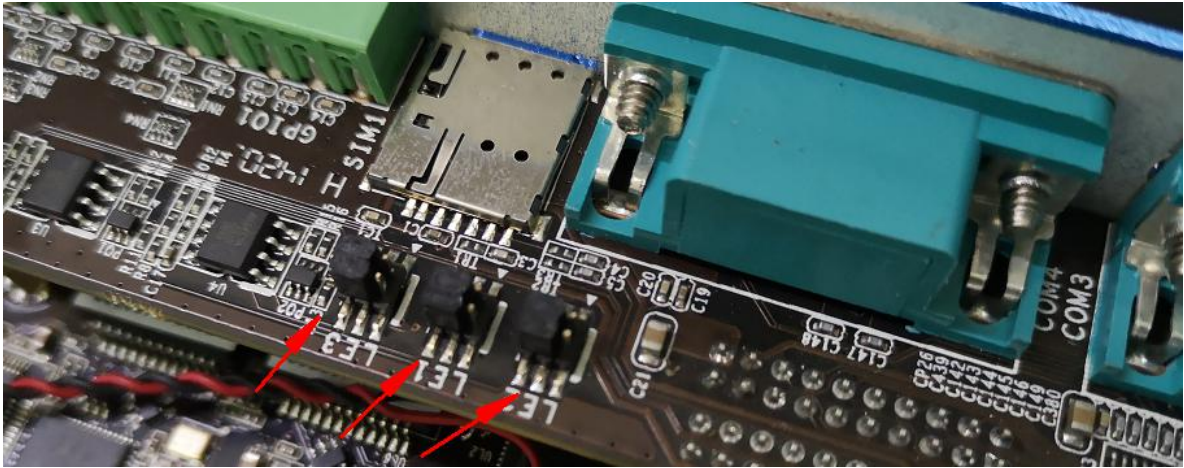




BIOS

BIOS, Advanced → IT8784 Super IO Configuration,

COM3: Serial Port 3 Configuration, RS485 Mode → Disabled a Enabled;

COM4: Serial Port 4 Configuration, RS485 Mode → Disabled a Enabled

F4 Guardar y Salir

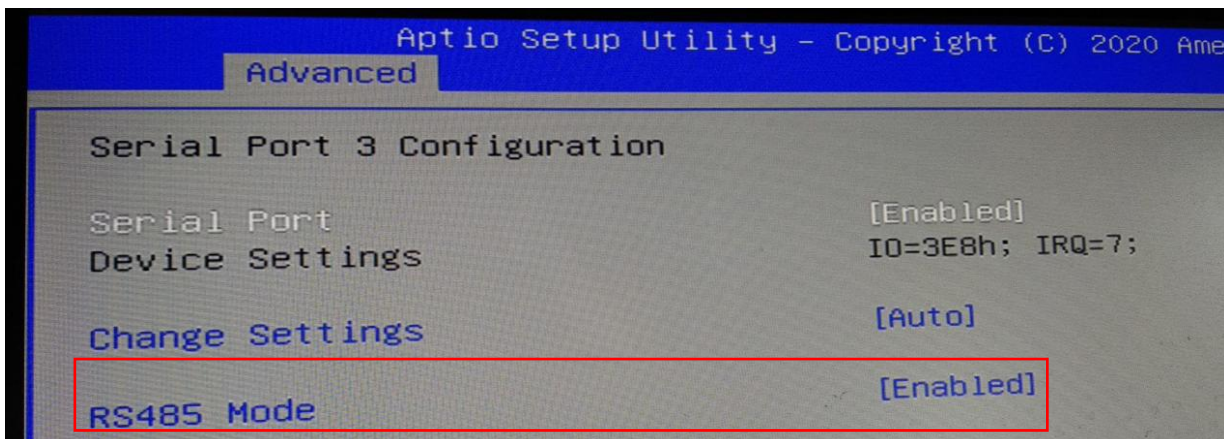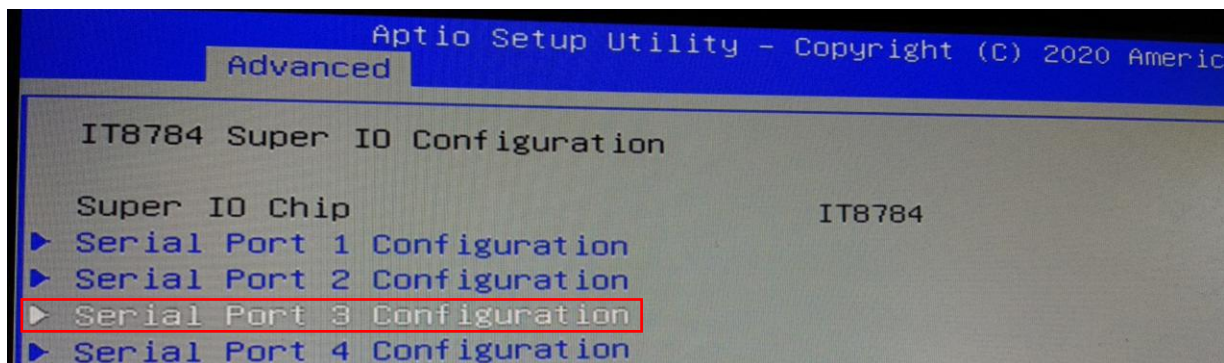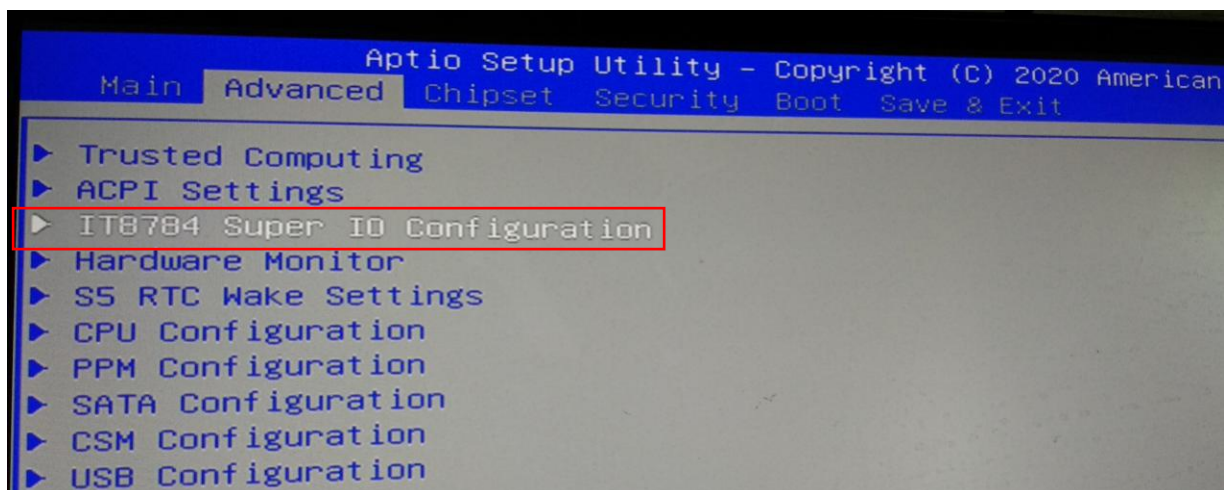

ARRANQUE AUTÓMATICO TRAS TOMA DE ENERGÍA

BIOS

"Chipset" — "South Bridge" , "Restore AC Power" Pasar a "Power ON"

F4 Guardar y Salir

Solo cuando la máquina está completamente apagada, la máquina puede encenderse solo después de ingresar el voltaje.

